



Inkjet Stencils Instruction Guide

Product List

- **Any Epson Ecotank Printer** – ET-2660, ET-2750 or any other.
- **Inkjet Stencils formula** One or more 4oz bottle
- **Gloves**
- **Syringe or funnel** may be useful dispensing ink into the printer tanks. **Epson ink bottle dispensing caps work best. These are supplied with all new Epson EcoTank printers.**

Getting Started

Take the printer out of the box and keep the instruction guide.

DO NOT power up the printer until you have filled the ink tanks

Put gloves on to avoid staining your hands

Open the cover of the printer for all four ink tanks.

Remove dispensing caps from all 4 colours Epson ink bottles.

Open the bottle of Inkjet Printer Ink and pierce the foil seal with a pin or small pointed object. Place Epson dispensing cap on the bottle of Inkjet Printer Ink over the foil with black rubber washer in place.

Dispense the ink in all four tanks with the intention of distributing it evenly, 1 oz in each tank. Each ink tank has a mating dispensing cap that connects to the port to minimize spillage. Four ounces will not fill all tanks but will print about 3000 stencils.

Plug in the printer and turn it on and initiate the startup process.

Connect the printer to your internet network. You can send files to the printer from your wireless device over the WI-FI network.

Connect the printer to your computer with a USB cable if your computer has a USB port. USB cable is not supplied with the printer.

Start printing stencils.

Contact Us for Support

Please do not hesitate to contact us with any questions. We want you to have a good experience with this new technology.

You may find our contact information listed on our website.